

Operating Instructions  
Three Phase Motors  
Size 56 - 400



|                                                             |          |
|-------------------------------------------------------------|----------|
| <b>Table of contents.....</b>                               | <b>2</b> |
| 1. Safety instructions.....                                 | 3        |
| 1.1. Validity.....                                          | 3        |
| 1.2. Qualification of the personnel.....                    | 3        |
| 1.3. Basic safety rules .....                               | 3        |
| 1.4. Electrical potential.....                              | 3        |
| 1.5. Mechanical movement.....                               | 4        |
| 1.6. Increased surface temperatures .....                   | 4        |
| 1.7. Noise emission.....                                    | 4        |
| 2. Proper use .....                                         | 4        |
| 2.1. Unauthorized usage .....                               | 5        |
| 2.2. EU Motor regulation VO (EG) No. 640 / 2009 .....       | 5        |
| 3. Transport und storage .....                              | 5        |
| 4. Installation and assembly.....                           | 6        |
| 5. Electrical connection .....                              | 6        |
| 5.1. General information .....                              | 6        |
| 5.2. Connection of lead out cables.....                     | 7        |
| 6. Commissioning .....                                      | 7        |
| 6.1. General information.....                               | 7        |
| 6.2. Tightening torques .....                               | 8        |
| 7. Maintenance.....                                         | 9        |
| 7.1. Initial inspection .....                               | 10       |
| 7.2. Main inspection.....                                   | 10       |
| 7.3. Lubrication.....                                       | 11-12    |
| 7.3.1 Bearing sizes IP23 motors.....                        | 12       |
| 8. Auxiliary equipment .....                                | 13       |
| 8.1. Thermal protection.....                                | 13       |
| 8.2. Electromagnetic compatibility .....                    | 13       |
| 9. Troubleshooting .....                                    | 14       |
| 10. Structure of the motors.....                            | 15-18    |
| 11. Connection variants + circuit diagrams.....             | 19       |
| 11.1. Three phase motor.....                                | 19       |
| 11.2. Forced cooling fan.....                               | 20       |
| 11.3. Brake motor brake rectifier.....                      | 21       |
| 11.4. Pole-changing motors.....                             | 22       |
| 12. Motor behavior in frequency inverter operation.....     | 23       |
| 12.1. Explanation of the 87 Hertz characteristic curve..... | 23       |
| 13. Declaration of Conformity.....                          | 24       |

## **1. Safety instructions**

Please read the operating manual carefully before you start with commissioning. Consider the following warnings to avoid personnel injuries and machinery failures. SEVA-tec GmbH assumes no responsibility or guarantee for damage and consequential damage caused by failure to observe the operating instructions.

### **1.1. Validity**

These operating instructions are only valid for the following low-voltage three-phase motors (for AC motors, brakemotors, motors with frequency inverters and ATEX motors there are special operating and maintenance instructions from SEVA-tec):  
Series: MS, MX, MX2, MX3, ML, KSD, KSE

### **1.2. Qualification of the personnel**

All work on transport, connection for commissioning, and regular maintenance must be conducted by suitable, qualified, instructed, and authorised personnel. (VDE 0105: please observe IEC 364).

### **1.3. Basic safety rules**

The safety risks posed by the motor must be reassessed after installing it into the end device. The local occupational safety regulations must be observed during the usage of the motor. The operation place must be kept clean and tidy.

### **1.4. Electric Voltage**

Regularly check the electrical equipment of the motor. Immediately replace loose connections and defected cables. To avoid electrical shock, use a rubber mat while working on the electrically charged motor.



**DANGER**

**Electric charge on the motor**

Do not open the terminal box until five minutes after the voltage supply has been switched off.



**DANGER**

**Voltage can occur at the terminals even when the motor is switched off**

Do not stay in the danger zone of the motor. When working on the motor, switch off the mains voltage and secure it against being switched on again.



## **DANGER**

### **Motor restart**

When control voltage is applied or the set speed value is stored, the motor restarts automatically after If the control voltage is applied or the speed setpoint is stored, the motor restarts automatically after a power failure.

#### **1.5. Mechanical movement**

Body parts which come into contact with rotating parts, can be injured. Clothes, jewellery, and similar objects can be caught and pulled into the motor. Secure the motor against contact. Do not wear loose garments while working on the motor. A test run must be performed without a key (risk of centrifuging).



## **DANGER**

### **Rotating parts**

#### **1.6. Increased surface temperatures**

Ensure sufficient contact protection to avoid burn risks.



## **DANGER**

### **Surface temperatures**

#### **1.7. Noise emission**

Take protection measures and secure the personnel with appropriate equipment, such as hearing protection.



## **DANGER**

### **Sound pressure level**

#### **2. Proper use**

The motors are only approved by SEVA-tec GmbH for being used for purposes specified in the catalog and related technical documentation. Any other usage beyond this is not permitted. This also includes the consideration of all related product regulations. Modifications to the motor are not permitted. Other products and components which are being used with or integrated to the motor must be approved by SEVA-tec GmbH. The usage in EX-area is prohibited, unless explicitly designated for this purpose (note additional information).

## 2.1. Unauthorised usage

In particular, the following uses of motors are prohibited and can lead to machinery failure:

- Operating the motor with imbalance, for example, caused by dust deposits or icing.
- Resonance operation, operation with strong vibrations, transmitted from the environment to the motor. Periodic shock impacts only up to 1G are permissible. For the higher shock loads contact SEVA-tec GmbH.
- Painting of the motors (if not explicitly approved by SEVA-tec GmbH).
- Release connections, for example, screws during operation.
- Opening the terminal box during operation.
- Operating the motors near combustible materials or components.
- Operating the motors in an explosive atmosphere.
- Operation with fully or partially dismantled or manipulated devices.

## 2.2. EU Motor regulation (EU) 2049/1781

As of Oct. 1, 2019, the European Commission's Regulation (EU) 2049/1781 for electric motors has come into force. In this regulation, the ecodesign requirements for 2-, 4-, 6-, and 8-pole low-voltage three-phase asynchronous motors in the power range 0.12 kW to 1000 kW are regulated. Extensive changes must be complied with from 1 July 2021.

Reorganization of the classification of energy-efficient asynchronous motors  
Regulation(EU)2049/1781 of 1.10.2019

| Motor type                                |                                          | Minimum requirement for energy efficiency |      |           |      |      |           |
|-------------------------------------------|------------------------------------------|-------------------------------------------|------|-----------|------|------|-----------|
| AC motors<br>Induction motors up to 1000V |                                          | 2020                                      | 2021 | July 2021 | 2022 | 2023 | July 2023 |
| 0,75-7,5 KW                               | 3 phase,<br>2/4/6 pole                   | IE2+VFD/IE3                               |      | IE3       |      |      |           |
| 7,5-375 KW                                | 3 phase,<br>2/4/6 pole                   | IE2+VFD/IE3                               |      | IE3       |      |      |           |
| 75-200 KW                                 | 3 phase,<br>2/4/6 pole                   |                                           |      |           |      |      | IE4       |
| 375-1000 KW                               | 3 phase,<br>2/4/6 pole                   |                                           |      | IE3       |      |      |           |
| 0,75-1000 KW                              | 3 phase,<br>8 pole                       |                                           |      | IE3       |      |      |           |
| 0,75-1000 KW                              | ATEX (except<br>eb*) and<br>brake motors |                                           |      | IE3       |      |      |           |
| 0,12-1000 KW                              | EX eb*<br>2/4/6/8 pole                   |                                           |      |           |      |      | IE2       |
| ≥ 0,12 KW                                 | 1 phase                                  |                                           |      |           |      |      | IE2       |
| 0,12-0,75 KW                              | 3 phase,<br>2/4/6/8 pole                 |                                           |      | IE2       |      |      |           |

\*EX eb: Motor with increased safety

[Click to enlarge!](#)

## 3. Transport und storage

Keep the motors safe against mechanical damage and only in closed dry rooms. In case of short-term storage in an open air area the motors must be protected against harmful environmental influences. Motors must not be transported and stored on the fan cover. For transport the eye bolts of motors must be used with suitable lifting devices. The eye bolts are only intended for lifting the motor without additional attachments such as base plates, gear boxes etc. If the eye bolt is removed after installation, the openings must be permanently closed according to the type of protection.

For longer storage periods, a low vibration environment should be ensured to avoid bearing damage. After a storage period or downtime period of more than 12 months, a check of the grease state of all lubricated parts, such as bearings and shaft seal rings, must be carried out before commissioning and, if necessary, the grease must be replaced.

Caution: for longer storage or downtime periods a check of bearings and oil seals must be conducted before commissioning.

#### 4. Installation and assembly

The following points must be observed during installation and assembly:

- Ensure even support, precise alignment in case of direct coupling and use of thread sizes specified in EN 50347 for motor feet and flange mounting.
- Provide a vibration-free environment. Avoid build-up resonances with rotation frequency and the double frequency of the power supply.
- Turn the rotor by hand, pay attention to unusual grinding noises. Check the direction of rotation in the coupled state.
- Pull the drive elements (belt pulley, clutch etc.) on and off using only suitable devices. Use cover to protect from touching. The part to be pulled on is to be heated. Transmission elements must not be hammered on the shaft by force. Avoid excessive belt tension.
- Airflow must not be prevented. Ensure enough space for the airflow and that the blown-out, heated cooling air is not drawn in back again.
- All components mounted on the shaft end must be carefully balanced. The standard motors are half-key balanced unless explicitly specified.
- Due to the use of cylindrical roller bearings („reinforced NU-Bearing“) relatively high radial forces or masses can be applied at the end of the motor shaft. The minimum radial force at the shaft end must be a quarter of the permissible radial force. The permissible shaft load must be taken into account.
- The user ensures that the condensate water drain holes on motors with increased IP protection (IPX6 / IP6X) are sealed in a water – or dust-tight manner after the condensate has been drained as well as during transport and storage.
- For the IM B14 and IM B34 mounting motors the maximum screw-in depths specified in the table 1 must be observed. If an IM B14 and IM B34 mounting motor is used, stored or transported without flanged equipment, the user must take appropriate precautions against the intrusion of foreign particles and moisture through the threaded holes.

| Frame size | Screw-in depth, mm | Frame size | Screw-in depth, mm |
|------------|--------------------|------------|--------------------|
| 56-63      | 8                  | 100-112    | 15                 |
| 71         | 10                 | 132        | 17                 |
| 80         | 11                 | 160        | 24                 |
| 90         | 14                 |            |                    |

**Table 1.** Screw-in depths of motor mountings IM B14 and IM B34.

#### 5. Electrical connection

##### 5.1. General information

All maintenance procedures must only be carried out by a qualified specialist on a stationary motor in a state where it is disconnected and secured against restart. This also applies to auxiliary circuits (heating). Please note the performance data on the nameplate and connection diagram in the terminal box.

Caution: follow the performance data on the motor nameplate.

According to IEC / EN 60034-1 (VDE 0530-1) for the operation of asynchronous standard motors, voltage deviations of up to  $\pm 5\%$  are permissible. Power supply cables should be selected according to the installation specific conditions specified in DIN VDE 0100 (current, ambient temperature, installation method etc.).

The connection must be made in such a way that a permanently secure electrical connection is maintained (no protruding wire ends). Suitable cable lugs must be used for the connections of all main cables. A safe protective conductor connection must be made. Tightening torques can be found in Table 2.

| Thread | Frame size              | Tightening torque (Nm)<br>Min. | Tightening torque (Nm)<br>Max. |
|--------|-------------------------|--------------------------------|--------------------------------|
| M4     | BG56-80                 | 1,9                            | 2,2                            |
| M5     | BG90-132                | 3,9                            | 4,5                            |
| M6     | BG160-180               | 6,6                            | 7,5                            |
| M8     | BG200-225               | 16,0                           | 18,4                           |
| M10    | BG250-280               | 32,0                           | 36,0                           |
| M12    | BG315 (only AWM)        | 68,0                           | 74,0                           |
| M16    | BG315, BG355 (only AWM) | 139,0                          | 159,0                          |
| M20    | BG355, BG400 (only AWM) | 273,0                          | 312,0                          |
| M24    | BG400                   | 472,0                          | 539,0                          |

**Table 2.** Tightening torques for cable connection.

Caution: ensure the appropriate selection of the power supply cables.

There must be no foreign bodies, dirt, or moisture in the terminal box. Close unused cable entry openings and the terminal box so that they are dust- and watertight. For the test run without drive elements, secure the feather key against being thrown out.

## 5.2. Connection of lead out cables

For motors with lead out cables, the terminal board is dismantled at the factory and the connecting leads are connected to the terminals of the stator winding. The connection leads are colour-coded, the assignment of the colour is glued on the cover plate. For the motor version with terminal box, each individual wire is labeled. The user connects the lead out cables in the control cabinet accordingly.

## 6. Commissioning

### 6.1. General information

The installation must be carried out in a power-supply-free state, in accordance with applicable regulations by appropriately trained personnel. The nameplate date of the motor must be compared to the power supply conditions. The dimensions of the power cables must be adapted to the nominal currents of the motor. The motors are to be operated with an overcurrent protection, which is adjusted according to the rated data (1.1 times rated current) of the motor. Failure to do so leads to the winding defect and a loss of warranty.

Caution: check the insulation resistance of the winding before commissioning.

Please check the insulation resistance of the winding before switching it on for the first time. The resistance should be higher than 5MΩ at an ambient temperature of 25°C. After longer storage, the insulation test must also be carried out. Before the machine is connected, the direction of rotation must be checked. If necessary, change the direction of rotation by exchanging the connection of two phases.

Before closing the terminal box it is essential to check that:

- The connection is done according to the connection diagram
- All terminal box connections, mounting parts and grounding connections are firmly tightened
- Auxiliary devices are functional
- All minimum values of the clearance distances between bare, voltage-carrying parts towards the ground and to each other (10mm bus 750V) are complied with
- Unused cable entry openings and the condensate drain (if present) are sealed dust-tight and water-tight.

When commissioning, it is advisable to observe the current consumption under load in order to recognize any possible overload or asymmetries on the line.

## 6.2. Tightening torques

**Table 3** shows tightening torques for screws of the end shields, bearing caps and terminal box.

| Frame size                      | Arrangement | End shield   | Bearing cap | Terminal box cap | Terminal box  |
|---------------------------------|-------------|--------------|-------------|------------------|---------------|
| Thread / Tightening torque (Nm) |             |              |             |                  |               |
| 56                              | B3/B5/B14   | M4 / 2,0 Nm  | -           | M4 / 1,0 Nm      | M4 / 2,0 Nm   |
| 63                              |             |              | -           | M5 / 1,5 Nm      | M5 / 3,0 Nm   |
| 71                              |             |              | -           |                  |               |
| 80                              |             | M6 / 7,0 Nm  | -           |                  |               |
| 90                              |             |              | -           | M5 / 2,5 Nm      | M5 / 4,0 Nm   |
| 100                             |             |              | -           |                  |               |
| 112                             |             | M8 / 17 Nm   | -           |                  |               |
| 132                             |             |              | -           |                  |               |
| 160                             |             |              | M6 / 7 Nm   | M6 / 3,0 Nm      | M6 / 4,5 Nm   |
| 180                             |             | M10 / 34 Nm  |             |                  |               |
| 200                             |             | M12 / 60 Nm  | M8 / 17 Nm  | M8 / 4,0 Nm      | M8 / 7,0 Nm   |
| 225                             |             |              |             |                  |               |
| 250                             |             |              | M10 / 34 Nm | M8 / 4,5 Nm      | M10 / 11,5 Nm |
| 280                             |             |              |             |                  |               |
| 315                             |             | M16 / 149 Nm |             |                  |               |
| 355                             |             | M20 / 290 Nm |             |                  |               |
| 400                             |             |              |             |                  |               |

**Table 3.** Tightening torques for terminal box, end shield and bearing cap.

If a motor has an arrangement on feet (type B3, B34, B35), the following tightening torques for the screws on the motor feet must be complied with:

| Thread | Tightening torque (Nm) Min. | Tightening torque (Nm) Max. |
|--------|-----------------------------|-----------------------------|
| M4     | 2,0                         | 3,0                         |
| M5     | 3,5                         | 5,0                         |
| M6     | 6,0                         | 9,0                         |
| M8     | 16,0                        | 24,0                        |
| M10    | 30,0                        | 44,0                        |
| M12    | 46,0                        | 70,0                        |
| M16    | 110,0                       | 165,0                       |
| M20    | 225,0                       | 340,0                       |

Table 4. Tightening torques for motor feet screws.

Tightening torques for the metal and plastic cable glands for the direct attachment to the machine and other glands (such as reducers) shall be in accordance with **Table 5**.

| Cable gland | Metal ±10% Nm | Plastic ±10% Nm |
|-------------|---------------|-----------------|
| M16 x 1,5   | 10            | 2               |
| M20 x 1,5   | 12            | 4               |
| M25 x 1,5   |               |                 |
| M32 x 1,5   | 18            | 6               |
| M40 x 1,5   |               |                 |
| M50 x 1,5   | 20            |                 |
| M60 x 1,5   |               |                 |

**Table 5.** Tightening torques for cable glands.

## 7. Maintenance

Maintenance of the motor may only be conducted considering the safety instructions in 1 – 6. Careful and regular maintenance, inspections and revisions are necessary in order to detect and correct any faults in good time before damage can occur. General deadlines are given in the **Table 6** below (periods should be adapted to the local conditions, such as pollution, load etc.):

| Function                                        | Time interval                    | Periods                    |
|-------------------------------------------------|----------------------------------|----------------------------|
| Initial inspection                              | After approx. 500h               | At the latest after ½ year |
| Control of the airways and surface of the motor | Depending on local conditions    |                            |
| Re-lubrication                                  | Acc. <b>Table 7</b> or nameplate | Once a year                |
| Main inspection                                 | 10.000 h                         | Once a year                |

**Table 6.** Notifiable maintenance and inspections.

A grease quality allows the operation of the engine of the motors of 20.000 h without renewal of the rolling bearing grease under normal load conditions and under normal environment conditions. The condition of grease should however be controlled even during this period. The specified life expectancy of bearings applies only for operation with nominal speed and bearing operating temperature of 80°C (ambient temperature 20°C). When operating with inverter or increased ambient temperatures, the specified lubrication periods must be reduced by 25% as a result of the higher heating of the motor. If the nominal speed is exceeded during the operation of the motor with inverter, the re-lubrication periods are reduced in the reverse proportion to the increase in the speed. Re-lubricate the bearings after thorough cleaning with appropriate solvents.

Caution: when operating over the rated speed or at increased ambient temperatures, the specified lubrication periods must be reduced by 25%.

The greases with the same oil base and the same thickener must be used. The grease quantity indicated on the nameplate must be observed. Approximately twice the quantity is required for the first relubrication, as the grease lubrication tubes are still empty. The used old grease must be disposed of after 3 relubrication operations.

### **7.1. Initial inspection**

Following tests are carried out when the machinery is at downtime:

- Check the foundation.

Following tests are carried out when the machinery is running:

- Check the electrical characteristics.
- Check the bearing temperatures.
- Check the running noise.

### **7.2. Main inspection**

The following tests are carried out when the machine is at a standstill:

- Check the foundation.
- Check the alignment of the motor.
- Check the fastening screws and tightening torques
- Check the cables and the insulation material. The test determines whether the cables and the insulating materials are in a proper condition. They must not display discoloration or any burn marks and must not be cracked or otherwise damaged.
- Check the insulation resistance
- Depending on the quality of grease, local ambient conditions and the duty, the change of the rolling bearings and the oil seals may be necessary after 10.000 h (but at least annually).

The following tests are carried out when the machine is running:

- Check the electrical characteristics
- Check the bearing temperatures
- Check the running noise

All discrepancies discovered during the inspections must be rectified immediately.

## 7.3 Lubrication

For motors with open rolling bearings (current-insulated or "reinforced" NU bearings), the relubrication intervals must be observed in accordance with the table shown .

\*= For motors of size 56 to 180, closed bearings with lifetime lubrication are used!

| Type        | Power | Pole | Ball bearing<br>(A-Side)<br>Bearing clearance:C3 | Ball bearing<br>(B-Side)<br>Bearing clearance:C3 | Re-Lubrication-<br>Intervalls<br>Hours | First - Filling<br>DE/NDE<br>Gram | Re-Lubrication-<br>Quantity DE/NDE<br>Gram |
|-------------|-------|------|--------------------------------------------------|--------------------------------------------------|----------------------------------------|-----------------------------------|--------------------------------------------|
| SEV-160M2   | 11    | 2    | 6209                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-160Mx-2 | 15    | 2    | 6209                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-160L2   | 18,5  | 2    | 6209                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-180M2   | 22    | 2    | 6211                                             | 6211                                             | *                                      | *                                 | *                                          |
| SEV-200L2   | 30    | 2    | 6212 / NU312                                     | 6212                                             | 1500                                   | 32/32                             | 25/25                                      |
| SEV-200Lx-2 | 37    | 2    | 6212 / NU312                                     | 6212                                             | 1500                                   | 32/32                             | 25/25                                      |
| SEV-225M2   | 45    | 2    | 6312 / NU312                                     | 6312                                             | 1500                                   | 32/32                             | 25/25                                      |
| SEV-250M2   | 55    | 2    | 6313 / NU313                                     | 6313                                             | 1000                                   | 45/45                             | 35/35                                      |
| SEV-280S2   | 75    | 2    | 6314 / NU314                                     | 6314                                             | 1000                                   | 45/45                             | 35/35                                      |
| SEV-280M2   | 90    | 2    | 6314 / NU314                                     | 6314                                             | 1000                                   | 45/45                             | 35/35                                      |
| SEV-315S2   | 110   | 2    | 6317 / NU317                                     | 6317                                             | 1000                                   | 65/65                             | 50/50                                      |
| SEV-315M2   | 132   | 2    | 6317 / NU317                                     | 6317                                             | 1000                                   | 65/65                             | 50/50                                      |
| SEV-315L2   | 160   | 2    | 6317 / NU317                                     | 6317                                             | 1000                                   | 65/65                             | 50/50                                      |
| SEV-315Lx-2 | 200   | 2    | 6317 / NU317                                     | 6317                                             | 1000                                   | 65/65                             | 50/50                                      |
| SEV-355M2   | 250   | 2    | 6319 / NU319                                     | 6319                                             | 1000                                   | 80/80                             | 60/60                                      |
| SEV-355L-2  | 315   | 2    | 6319 / NU319                                     | 6319                                             | 1000                                   | 80/80                             | 60/60                                      |
|             |       |      |                                                  |                                                  |                                        |                                   |                                            |
| SEV-160M4   | 11    | 4    | 6309                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-160L4   | 15    | 4    | 6309                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-180M4   | 18,5  | 4    | 6311                                             | 6211                                             | *                                      | *                                 | *                                          |
| SEV-180L4   | 22    | 4    | 6311                                             | 6211                                             | *                                      | *                                 | *                                          |
| SEV-200L4   | 30    | 4    | 6312 / NU312                                     | 6212                                             | 5000                                   | 32/32                             | 25/25                                      |
| SEV-225S4   | 37    | 4    | 6313 / NU313                                     | 6312                                             | 5000                                   | 32/32                             | 25/25                                      |
| SEV-225M4   | 45    | 4    | 6313 / NU313                                     | 6312                                             | 5000                                   | 32/32                             | 25/25                                      |
| SEV-250M4   | 55    | 4    | 6314 / NU314                                     | 6313                                             | 4500                                   | 45/45                             | 35/35                                      |
| SEV-280S4   | 75    | 4    | 6317 / NU317                                     | 6314                                             | 4000                                   | 45/45                             | 35/35                                      |
| SEV-280M4   | 90    | 4    | 6317 / NU317                                     | 6314                                             | 4000                                   | 45/45                             | 35/35                                      |
| SEV-315S4   | 110   | 4    | 6319 / NU319                                     | 6319                                             | 3500                                   | 65/65                             | 50/50                                      |
| SEV-315M4   | 132   | 4    | 6319 / NU319                                     | 6319                                             | 3500                                   | 65/65                             | 50/50                                      |
| SEV-315L4   | 160   | 4    | 6319 / NU319                                     | 6319                                             | 3500                                   | 65/65                             | 50/50                                      |
| SEV-315Lx-4 | 200   | 4    | 6319 / NU319                                     | 6319                                             | 3500                                   | 65/65                             | 50/50                                      |
| SEV-355M4   | 250   | 4    | 6322 / NU322                                     | 6322                                             | 2800                                   | 80/80                             | 60/60                                      |
| SEV-355L4   | 315   | 4    | 6322 / NU322                                     | 6322                                             | 2800                                   | 80/80                             | 60/60                                      |

Table 7. Relubrication intervals for open and reinforced bearings

| Type        | Power | Pole | Ball bearing<br>(A-Side)<br>Bearing clearance:C3 | Ball bearing<br>(B-Side)<br>Bearing clearance:C3 | Re-Lubrication-<br>Intervalls<br>Hours | First - Filling<br>DE/NDE<br>Gram | Re-Lubrication-<br>Quantity DE/NDE<br>Gram |
|-------------|-------|------|--------------------------------------------------|--------------------------------------------------|----------------------------------------|-----------------------------------|--------------------------------------------|
| SEV-160M6   | 7,5   | 6    | 6309                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-160L6   | 11    | 6    | 6309                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-180L6   | 15    | 6    | 6311                                             | 6211                                             | *                                      | *                                 | *                                          |
| SEV-200L6   | 18,5  | 6    | 6312 / NU312                                     | 6212                                             | 6500                                   | 32/32                             | 25/25                                      |
| SEV-200Lx-6 | 22    | 6    | 6312 / NU312                                     | 6212                                             | 6500                                   | 32/32                             | 25/25                                      |
| SEV-225M6   | 30    | 6    | 6313 / NU313                                     | 6312                                             | 6500                                   | 32/32                             | 25/25                                      |
| SEV-250M6   | 37    | 6    | 6314 / NU314                                     | 6313                                             | 6300                                   | 45/45                             | 35/35                                      |
| SEV-280S6   | 45    | 6    | 6317 / NU317                                     | 6314                                             | 6000                                   | 45/45                             | 35/35                                      |
| SEV-280M6   | 55    | 6    | 6317 / NU317                                     | 6314                                             | 6000                                   | 45/45                             | 35/35                                      |
| SEV-315S6   | 75    | 6    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-315M6   | 90    | 6    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-315L6   | 110   | 6    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-315Lx-6 | 132   | 6    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-355M6   | 160   | 6    | 6322 / NU322                                     | 6322                                             | 4800                                   | 80/80                             | 60/60                                      |
| SEV-355Mx-6 | 200   | 6    | 6322 / NU322                                     | 6322                                             | 4800                                   | 80/80                             | 60/60                                      |
|             |       |      |                                                  |                                                  |                                        |                                   |                                            |
| SEV-160M1-8 | 4     | 8    | 6309                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-160M2-8 | 5 5   | 8    | 6309                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-160L-8  | 7 5   | 8    | 6309                                             | 6209                                             | *                                      | *                                 | *                                          |
| SEV-180L-8  | 11    | 8    | 6311                                             | 6211                                             | *                                      | *                                 | *                                          |
| SEV-200L-8  | 15    | 8    | 6312 / NU312                                     | 6212                                             | 6500                                   | 32/32                             | 25/25                                      |
| SEV-225S-8  | 18 5  | 8    | 6313 / NU313                                     | 6312                                             | 6500                                   | 32/32                             | 25/25                                      |
| SEV-225M-8  | 22    | 8    | 6313 / NU313                                     | 6312                                             | 6500                                   | 32/32                             | 25/25                                      |
| SEV-250M-8  | 30    | 8    | 6314 / NU314                                     | 6313                                             | 6300                                   | 45/45                             | 35/35                                      |
| SEV-280S-8  | 37    | 8    | 6317 / NU317                                     | 6314                                             | 6000                                   | 45/45                             | 35/35                                      |
| SEV-280M-8  | 45    | 8    | 6317 / NU317                                     | 6314                                             | 6000                                   | 45/45                             | 35/35                                      |
| SEV-315S-8  | 55    | 8    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-315M-8  | 75    | 8    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-315L1-8 | 90    | 8    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-315L2-8 | 110   | 8    | 6319 / NU319                                     | 6319                                             | 5800                                   | 65/65                             | 50/50                                      |
| SEV-355M1-8 | 132   | 8    | 6322 / NU322                                     | 6322                                             | 4800                                   | 80/80                             | 60/60                                      |
| SEV-355M2-8 | 160   | 8    | 6322 / NU322                                     | 6322                                             | 4800                                   | 80/80                             | 60/60                                      |
| SEV-355M3-8 | 180   | 8    | 6322 / NU322                                     | 6322                                             | 4800                                   | 80/80                             | 60/60                                      |
| SEV-355L-8  | 200   | 8    | 6322 / NU322                                     | 6322                                             | 4800                                   | 80/80                             | 60/60                                      |

Table 7. Relubrication intervals for open and reinforced bearings

Table 7.1 Ball bearings IP23 Motors

| Ball bearings IP23 |         |         |         |         |         |         |
|--------------------|---------|---------|---------|---------|---------|---------|
| Size               | 2 pole  |         | 4 pole  |         | 6 pole  |         |
|                    | DE      | NDE     | DE      | NDE     | DE      | NDE     |
| 160                | 6310 C3 | 6309 C3 | 6310 C3 | 6309 C3 | 6310 C3 | 6309 C3 |
| 180                | 6312 C3 | 6312 C3 | 6312 C3 | 6312 C3 | 6312 C3 | 6312 C3 |
| 200                | 6313 C3 | 6313 C3 | 6313 C3 | 6313 C3 | 6313 C3 | 6313 C3 |
| 225                | 6314 C3 | 6314 C3 | 6314 C3 | 6314 C3 | 6314 C3 | 6314 C3 |
| 250                | 6314 C3 | 6314 C3 | 6317 C3 | 6317 C3 | 6317 C3 | 6317 C3 |
| 280                | 6314 C3 | 6314 C3 | 6318 C3 | 6318 C3 | 6318 C3 | 6318 C3 |
| 315                | 6317 C3 | 6317 C3 | 6319 C3 | 6319 C3 | 6319 C3 | 6319 C3 |
| 355                | 6317 C3 | 6317 C3 | 6322 C3 | 6320 C3 | 6322 C3 | 6320 C3 |

Table 7.1 Ball bearings IP23

Re-greasing on a running machine as well as downtime re-greasing is possible. Following information should be noted:

- When the engine is running, make sure that the grease outlet and grease inlet and channel are open. Inject the intended amount of grease into the bearing and let the machine run for 1 – 2 hours. Close the plug of the grease outlet. There may be a temporary increase in temperature of the bearing for the next 10 hours.
- When the motor is at a standstill, only half of the relubricating grease quantity must be used at first. Then let the motor run for 1 hour. After the motor has been switched off, inject the rest of the specified relubricating grease quantity into the bearing. After 2 hours of running, close the grease outlet.

For re-lubrication only ball bearing / roller bearing suitable grease with following properties can be used:

|                                      | 2-poles       |                 | 4-poles       |                 | 6-poles       |                 | 8-poles       |                 |
|--------------------------------------|---------------|-----------------|---------------|-----------------|---------------|-----------------|---------------|-----------------|
|                                      | 63XX.C3       | NU3XX.C3        | 63XX.C3       | NU3XX.C3        | 63XX.C3       | NU3XX.C3        | 63XX.C3       | NU3XX.C3        |
| Basis oil                            | Mineral oil   |                 |               |                 |               |                 |               |                 |
| Thickener                            | Lithium soap  | Mixed thickener | Lithium soap  | Mixed thickener | Lithium soap  | Mixed thickener | Lithium soap  | Mixed thickener |
| Viscosity 40°C                       | 68-100        | 100-150         | 100-150       | 150-220         | 150-220       | ≥220            | 150-220       | ≥220            |
| Consistency                          | 3             |                 |               |                 |               |                 |               |                 |
| Least continuous service temperature | -30<br>+120°C | -30<br>+140°C   | -30<br>+120°C | -30<br>+140°C   | -30<br>+120°C | -30<br>+140°C   | -30<br>+120°C | -30<br>+140°C   |

**Table 8.** Selection of the re-lubrication grease.

Caution: use appropriate grease for re-lubrication.

**Table 8** displays a grease specification and is only valid for ambient temperatures of – 30°C to +60°C, bearing temperature up to 110°C and operation with the rated speed. When operating above the rated speed, special high-speed greases may be used.

## 8. Auxiliary equipment

The motors are equipped with additional devices:

### 8.1. Thermal protection

To monitor the stator winding temperature PTC, PTO and PT100 can be used. For their connection, corresponding auxiliary terminals and circuits are provided in the main terminal box. If it is necessary to re-measure the cold resistance (at approx. 20 °C) of the sensor circuit, the measuring voltage must not exceed 2.5V DC.

### 8.2. Electromagnetic compatibility

The conformity of the motors as an independent unit with the EMC standards has been confirmed. The user of machinery is responsible for the fact that appropriate measures are taken to ensure that the devices or systems, in which the motors are integrated, as a whole comply with the relevant standards of the EMC. Each motor is supplied with the binding connection diagram according to which the connection must be made.


## 9. Troubleshooting

**Table 9** addresses the causes of errors that may occur and the action to be taken. All procedures are only allowed to be carried out by qualified personnel using suitable tools and instruments. For further information please contact SEVA-tec GmbH.

| Failure                                                 | Cause                                                    | Actions                                                                                                 |
|---------------------------------------------------------|----------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| The machinery doesn't start                             | Overload                                                 | Reduce the load                                                                                         |
|                                                         | Wrong stator connection                                  | Check the connection                                                                                    |
|                                                         | Fault power supply                                       | Check that power supply complies with information on nameplate                                          |
|                                                         | Interruption of one phase                                | Check connection and switches                                                                           |
|                                                         | Mechanical fault                                         | Check that motor rotates freely. Check the bearing and lubrication.                                     |
|                                                         | Rotor defect                                             | Check the broken bars and end rings.                                                                    |
|                                                         | Fuses burnt                                              | Use suitable fuses                                                                                      |
| The machinery is accelerating slow / doesn't accelerate | Load inertia at start too high                           | Reduce the load                                                                                         |
|                                                         | Under-voltage at motor terminals due to the voltage drop | Use higher voltage or higher transformer stage or reduce the load. Use appropriate cable cross-section. |
|                                                         | Defect rotor / broken rotor bars                         | Check the broken bars and end rings.                                                                    |
|                                                         | Winding / phase short circuit                            | Motor overhaul is needed                                                                                |
| Overheating of the machinery during operation with load | Overload                                                 | Reduce the load                                                                                         |
|                                                         | Cooling is prevented by dust accumulation                | Ensure proper cooling and cleanliness                                                                   |
|                                                         | Interruption of one phase                                | Check connection and switches                                                                           |
|                                                         | Short circuit on the ground                              | Repair in workshop needed                                                                               |
|                                                         | Imbalance of the power supply                            | Check the cables and transformer for faults                                                             |
| Motor vibrations                                        | Wrong alignment                                          | Align the motor                                                                                         |
|                                                         | Substructure is unstable                                 | Reinforce substructure                                                                                  |
|                                                         | Imbalance in clutch / gearbox                            | Balance clutch / gearbox                                                                                |
|                                                         | Imbalance in driven machinery                            | Re-balance the machinery system                                                                         |
|                                                         | Defect bearing                                           | Exchange the bearing                                                                                    |
|                                                         | Multi-phase motor runs single-phase                      | Check the circuit                                                                                       |
| Operation noise                                         | Circulating parts grinding                               | Correct the mounting                                                                                    |
|                                                         | Winding / phase short circuit                            | Motor overhaul                                                                                          |
|                                                         | Interruption of one phase                                | Check connection and switches                                                                           |
| High bearing temperature                                | Motor shaft bent or damaged                              | Straighten or replace the shaft                                                                         |
|                                                         | Wrong belt drive                                         | Reduce belt tension, arrange pulley closer to the bearing                                               |
|                                                         | Wrong alignment                                          | Align the machinery                                                                                     |
|                                                         | Inadequate / excess grease                               | Note the amount of re-grease                                                                            |

**Table 9.** Troubleshooting


**Beschreibung Ersatzteile / description of spare parts**  
**Aluminiumgehäuse / aluminum housing**



**Beschreibung Ersatzteile / description of spare parts**  
**Aluminiumgehäuse / aluminum housing**

| No.                                                                                                   | Bezeichnung                           | description                        | Serie MS | Serie ML |
|-------------------------------------------------------------------------------------------------------|---------------------------------------|------------------------------------|----------|----------|
| 1                                                                                                     | Statorgehäuse                         | Stator frame                       | X        | X        |
| 2                                                                                                     | A-Lagerschild                         | Drive end shield                   | X        | X        |
| 3                                                                                                     | Dichtung für Klemmenkasten            | Gasket for terminal box            | X        | X        |
| 4                                                                                                     | Klemmenkasten                         | Terminal box                       | X        |          |
| 5                                                                                                     | Klemmenkastendeckel                   | Terminal box cover                 | X        |          |
| 6                                                                                                     | Dichtung für Klemmenkastendeckel      | Gasket for terminal box cover      | X        |          |
| 7                                                                                                     | Anaufüße für Statorgehäuse            | Mounting feet for stator           | X        | X        |
| 8                                                                                                     | B-Lagerschild                         | Non drive end shield               | X        | X        |
| 9                                                                                                     | Kurzschlussläufer                     | Squirrel-cage                      | X        | X        |
| 10                                                                                                    | DE-Lager                              | Drive end bearing                  | X        | X        |
| 10a                                                                                                   | NDE-Lager                             | Non drive end bearing              | X        | X        |
| 11                                                                                                    | Passfeder                             | Key                                | X        | X        |
| 12                                                                                                    | Lüfterflügel                          | Fan                                | X        | X        |
| 13                                                                                                    | Wellendichtring                       | Dust seal                          | X        | X        |
| 14                                                                                                    | Klemmenbrett                          | Terminal board                     | X        | X        |
| 15                                                                                                    | Kabelverschraubung                    | Cable gland                        | X        | X        |
| 16                                                                                                    | Sicherungsring                        | Circlip                            | X        | X        |
| 17                                                                                                    | Lagerausgleichscheibe                 | Bearing shim                       | X        | X        |
| 18                                                                                                    | Lüfterhaube                           | Fan cover                          | X        | X        |
| 19                                                                                                    | Typenschild                           | Name plate                         | X        | X        |
| 20                                                                                                    | Schraube für Lagerschild bzw. Flansch | Screw for end shield               | X        | X        |
| 21                                                                                                    | Schraube für Klemmenkasten            | Screw for terminal box             | X        | X        |
| 22                                                                                                    | Schraube für Klemmenbrett             | Screw for terminal board           | X        | X        |
| 23                                                                                                    | Schraube für Klemmenkastendeckel      | Screw for terminal box cover       | X        | X        |
| 24                                                                                                    | Schraube für Lüfterhaube              | Screw for fan cover                | X        | X        |
| 25                                                                                                    | B5 -Flansch                           | Flange IM B5                       | X        | X        |
| 26                                                                                                    | B14 - Flansch                         | Flange IM B14                      | X        | X        |
| 27                                                                                                    | Schraube für Anaufüße                 | Screw for mounting feet            | X        | X        |
| 28                                                                                                    | Klemmenkasten                         | Terminal box                       |          | X        |
| 29                                                                                                    | Klemmenkastendeckel                   | Terminal box cover                 |          | X        |
| 30                                                                                                    | Dichtung für Klemmenkastendeckel      | Gasket for terminal box cover      |          | X        |
| 32                                                                                                    | Kondensator                           | capacitor                          |          | X        |
| 32                                                                                                    | Fremdlüfter                           | Force ventilation                  | X        | X        |
| <b>Beschreibung Ersatzteile Bremsausführung</b><br><b>Description Spare parts braking performance</b> |                                       |                                    |          |          |
| 33                                                                                                    | Gleichrichter                         | rectifier                          | X        | X        |
| B1                                                                                                    | Bremslagerschild b-seitig (Grauguss)  | Drive end shield for brake         | X        |          |
| B2                                                                                                    | B-Lagerschild mit Bremsflansch        | Drive end shield with brake-flange | X        | X        |
| B3                                                                                                    | Bremsnarbe                            | brake hub                          | X        | X        |
| B4                                                                                                    | Passfeder                             | Key                                | X        | X        |
| B5                                                                                                    | Bremse                                | Brake                              | X        | X        |
| B6                                                                                                    | Bremsscheibe                          | Brake-flange                       | X        | X        |
| B7                                                                                                    | Handlüftung                           | manual release                     | X        | X        |
| B8                                                                                                    | Handlüftungshebel                     | Manual release lever               | X        | X        |
| B9                                                                                                    | Lüfterflügel                          | Fan                                | X        | X        |
| B10                                                                                                   | Mikroschalter                         | Microswitch                        | X        | X        |
| B11                                                                                                   | Bremslüfterhaube                      | Fan cover                          | X        | X        |
| B12                                                                                                   | Sicherungsring                        | circlip                            | X        | X        |

**Beschreibung Ersatzteile / description of spare parts**  
**Graugussgehäuse / Cast iron housing**

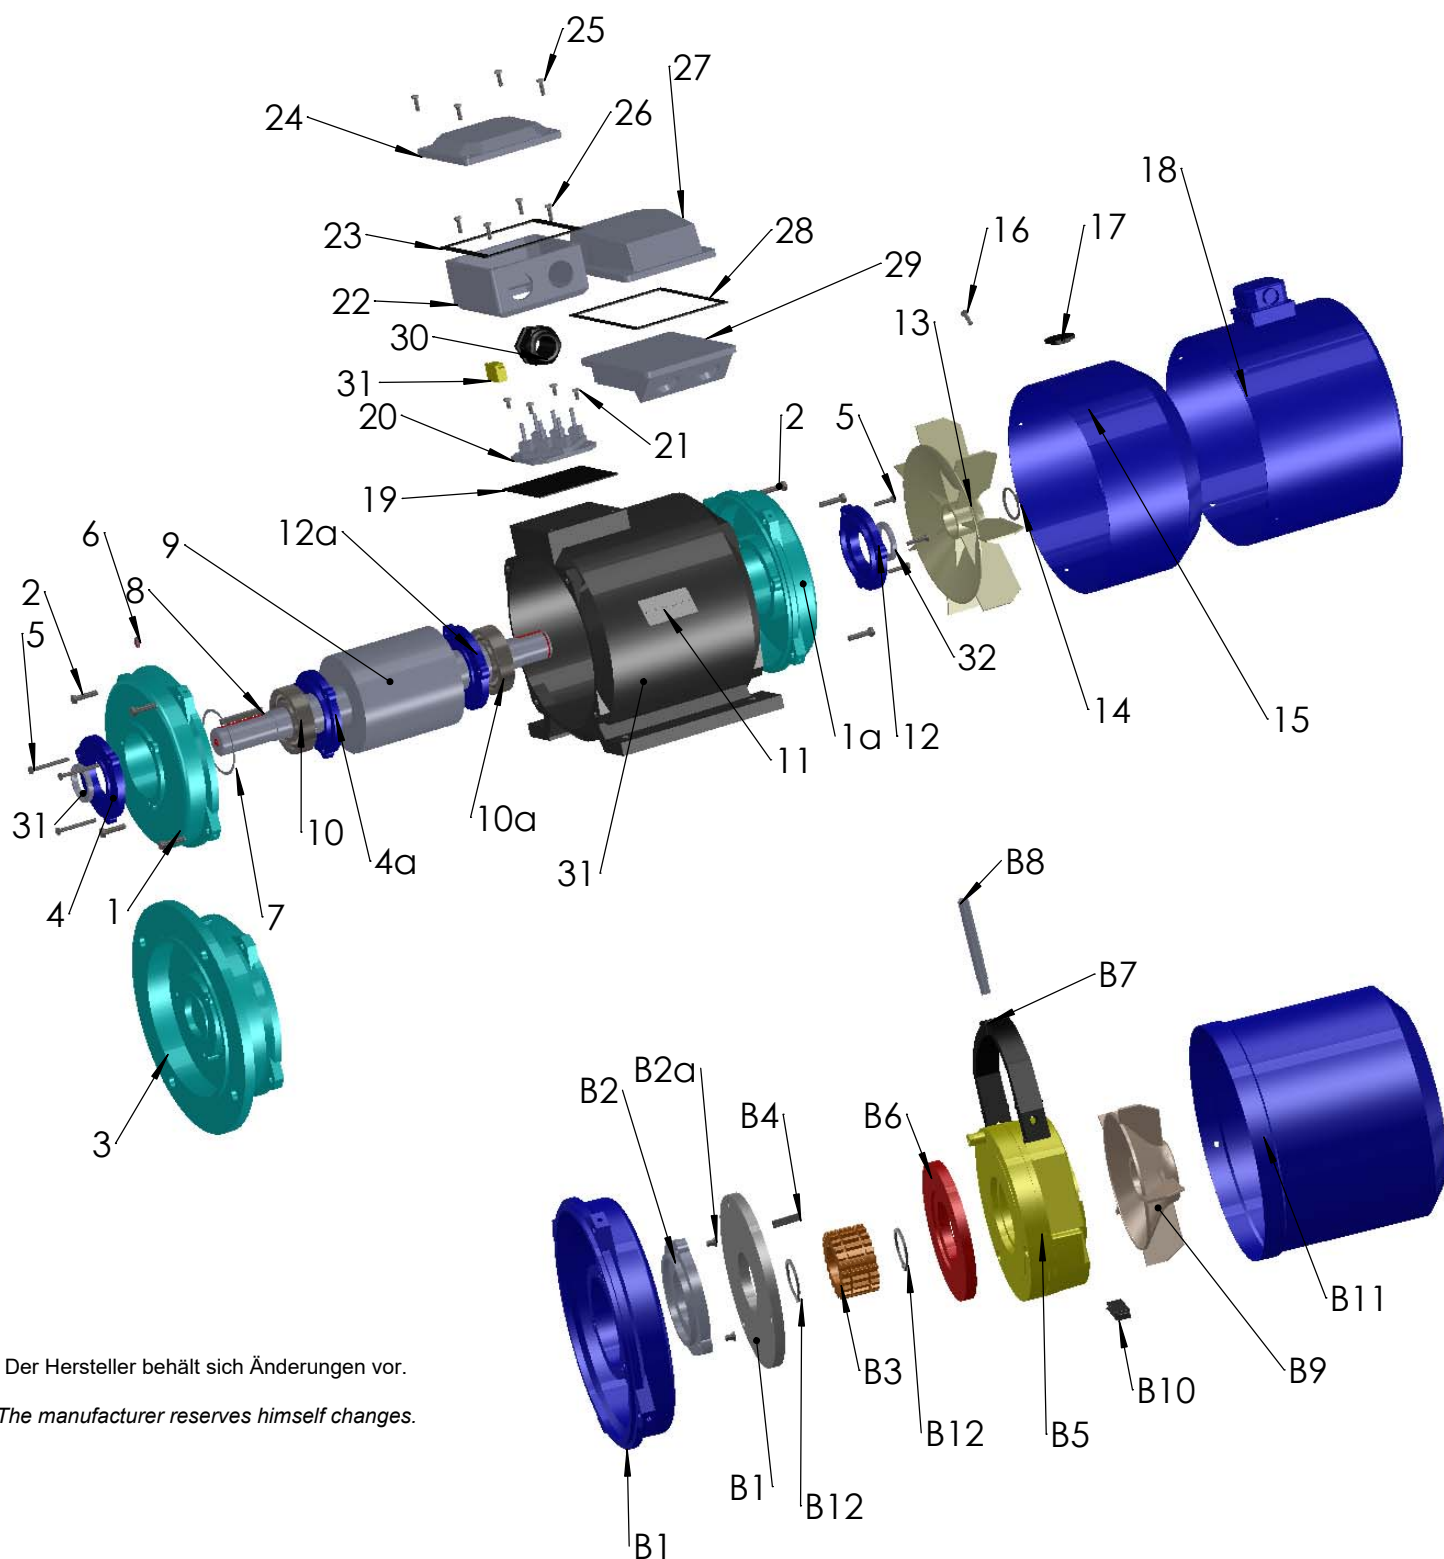

Der Hersteller behält sich Änderungen vor.  
 The manufacturer reserves himself changes.

**Beschreibung Ersatzteile / description of spare parts**  
**Graugussgehäuse / cast iron housing**


| No.                                                                                                   | Bezeichnung                            | description                           | Serie M | Serie MQ |
|-------------------------------------------------------------------------------------------------------|----------------------------------------|---------------------------------------|---------|----------|
| 1                                                                                                     | A - Lagerschild                        | Drive end shield                      | X       | X        |
| 1a                                                                                                    | B – Lagerschild                        | Non drive end shield                  | X       | X        |
| 2                                                                                                     | Schrauben für Lagerschild bzw. Flansch | Screw for end shield                  | X       | X        |
| 3                                                                                                     | B5 – Flansch                           | Flange IM B5                          | X       | X        |
| 4                                                                                                     | DE - Lagerdeckel „außen“               | Drive end outer bearing cap           | X       | X        |
| 4a                                                                                                    | DE - Lagerdeckel „innen“               | Drive end inner bearing cap           | X       | X        |
| 5                                                                                                     | Schrauben für Lagerdeckel              | Screw for drive end outer bearing cap | X       | X        |
| 6                                                                                                     | Schmiernippel                          | grease nipple                         | X       | X        |
| 7                                                                                                     | Lagerausgleichsscheibe                 | Bearing shim                          | X       | X        |
| 8                                                                                                     | Passfeder                              | Key                                   | X       | X        |
| 9                                                                                                     | Kurzschlussläufer                      | Squirrel-cage                         | X       | X        |
| 10                                                                                                    | DE – Lager                             | Drive end bearing                     | X       | X        |
| 10a                                                                                                   | NDE – Lager                            | Non drive end bearing                 | X       | X        |
| 11                                                                                                    | Typenschild                            | Name plate                            | X       | X        |
| 12                                                                                                    | NDE - Lagerdeckel „außen“              | Non drive end outer bearing cap       | X       | X        |
| 12a                                                                                                   | NDE - Lagerdeckel „innen“              | Non drive end inner bearing cap       | X       | X        |
| 13                                                                                                    | Lüfterflügel                           | Fan                                   | X       | X        |
| 14                                                                                                    | Sicherungsring                         | circlip                               | X       | X        |
| 15                                                                                                    | Lüfterhaube                            | Fan cover                             | X       | X        |
| 16                                                                                                    | Schraube für Lüfterhaube               | Screw for fan cover                   | X       | X        |
| 17                                                                                                    | Stopfen für Lüfterhaube                | Stopper for fan cover                 | X       | X        |
| 18                                                                                                    | Fremdlüfter                            | Force ventilation                     | X       | X        |
| 19                                                                                                    | Dichtung für Klemmenkasten             | Gasket for terminal box               | X       | X        |
| 20                                                                                                    | Klemmenbrett                           | Terminal board                        | X       | X        |
| 21                                                                                                    | Schraube für Klemmenbrett              | Screw for terminal board              | X       | X        |
| 22                                                                                                    | Klemmenkasten                          | Terminal box                          | X       |          |
| 23                                                                                                    | Dichtung für Klemmenkastendeckel       | Gasket for terminal box cover         | X       |          |
| 24                                                                                                    | Klemmenkastendeckel                    | terminal box cover                    | X       |          |
| 25                                                                                                    | Schraube für Klemmenkastendeckel       | Screw for terminal box cover          | X       | X        |
| 26                                                                                                    | Schraube für Klemmenkasten             | Screw for terminal box                | X       | X        |
| 27                                                                                                    | Klemmenkastendeckel                    | terminal box cover                    |         | X        |
| 28                                                                                                    | Dichtung für Klemmenkastendeckel       | Gasket for terminal box cover         |         | X        |
| 29                                                                                                    | Klemmenkasten                          | Terminal box                          |         | X        |
| 30                                                                                                    | Kabelverschraubung                     | Cable gland                           | X       | X        |
| 31                                                                                                    | Statorgehäuse                          | Stator frame                          | X       | X        |
| <b>Beschreibung Ersatzteile Bremsausführung</b><br><b>Description Spare parts braking performance</b> |                                        |                                       |         |          |
| 31                                                                                                    | Gleichrichter                          | rectifier                             | X       | X        |
| B1                                                                                                    | B – Lagerschild, inkl. Bremsflansch    | Drive end shield with brake-flange    | X       | X        |
| B2                                                                                                    | NDE - Lagerdeckel „außen“              | Non drive end outer bearing cap       | X       | X        |
| B3                                                                                                    | Bremsnarbe                             | brake hub                             | X       | X        |
| B4                                                                                                    | Passfeder                              | Key                                   | X       | X        |
| B5                                                                                                    | Bremse                                 | Brake                                 | X       | X        |
| B6                                                                                                    | Bremsscheibe                           | Brake-flange                          | X       | X        |
| B7                                                                                                    | Handlüftung                            | manual release                        | X       | X        |
| B8                                                                                                    | Handlüftungshebel                      | Manual release lever                  | X       | X        |
| B9                                                                                                    | Lüfterflügel                           | Fan                                   | X       | X        |
| B10                                                                                                   | Mikroschalter                          | Microswitch                           | X       | X        |
| B11                                                                                                   | Bremslüfterhaube                       | Fan cover                             | X       | X        |
| B12                                                                                                   | Sicherungsring                         | circlip                               | X       | X        |

## 11. Connection variants + Circuit diagrams

### 11.1 Three-phase motors

| Pole Number        | Nominal Powers at 400V, 50Hz |                       |
|--------------------|------------------------------|-----------------------|
|                    | 230V ( D ) / 400 V ( Y )     | 400V ( D )            |
| 2 or 4             | $\leq 3 \text{ kW}$          | $\geq 4 \text{ kW}$   |
| 6                  | $\leq 2,2 \text{ kW}$        | $\geq 3 \text{ kW}$   |
| 8                  | $\leq 1,5 \text{ kW}$        | $\geq 2,2 \text{ kW}$ |
| Starting Principle | Direct                       | Direct or Y/D         |

#### Basic motor connection wiring diagram

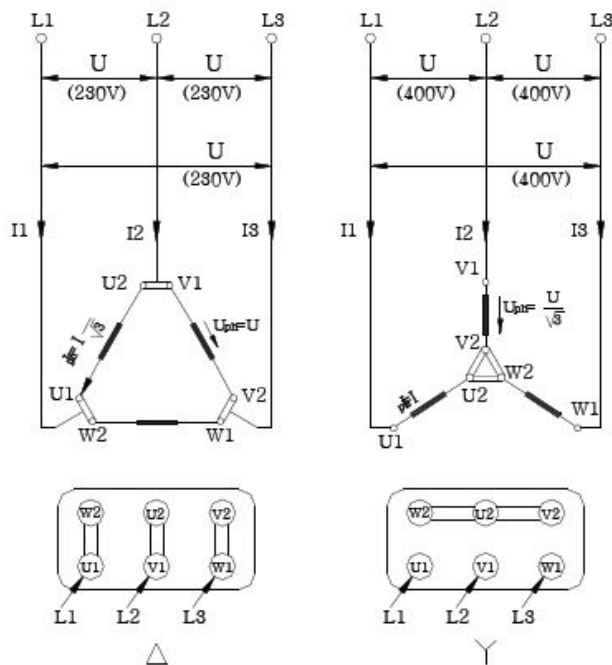


Delta connection



Star connection

## 11.2 Forced cooling fan

### Variant 1

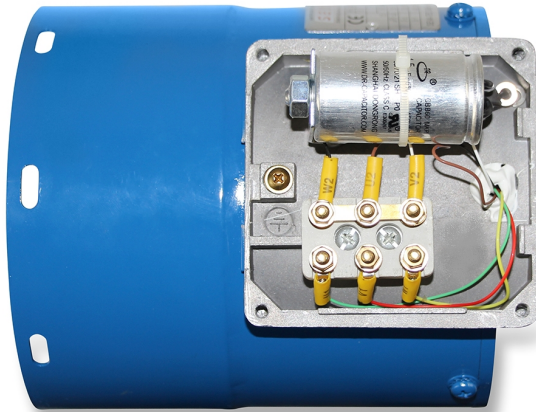


Multivoltage forced cooling fan, 230V masonry connection, 400V in star connection, in size 63 to 132, own connection cable required, cannot be operated via a frequency converter.

### Variant 2



400V external fan in star connection, in sizes 160 to 315, own connection cable required, not to be operated via a frequency converter.


### 11.3 Brake motors - Brake rectifier

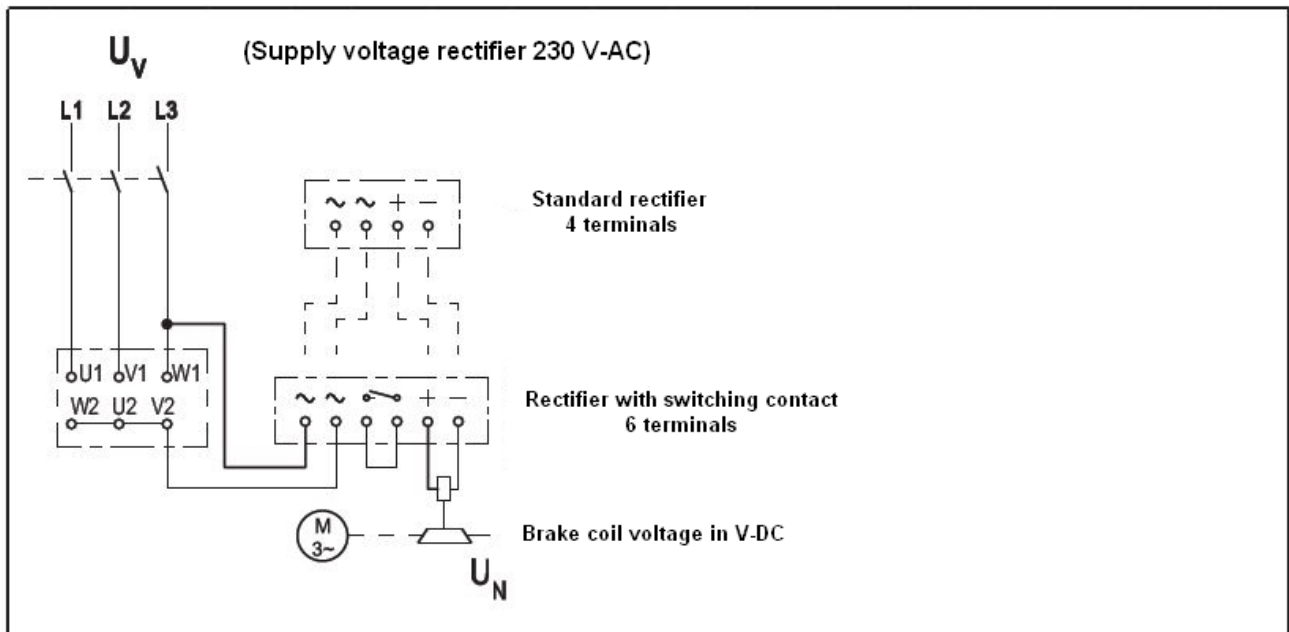

Supply: Phase-Starpoint

**Bridge rectifier**

$$U_N [\text{VDC}] = 0.9 \cdot U_V [\text{VAC}]$$

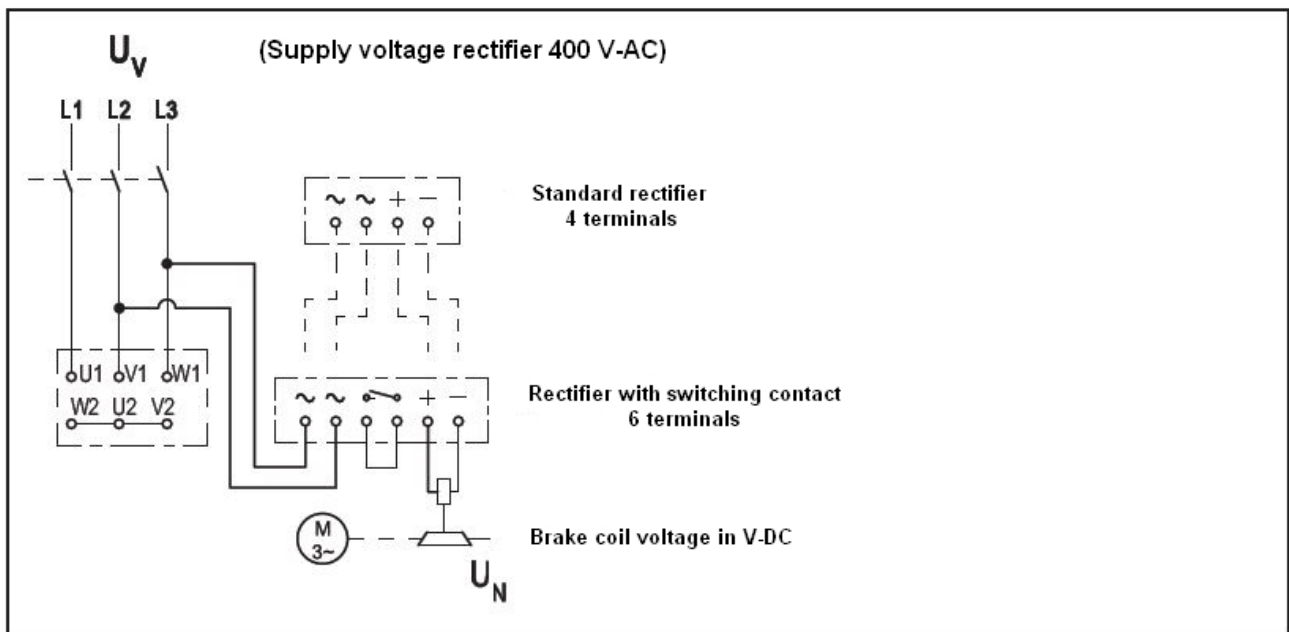

Supply: Phase-Phase


**Half-wave rectifier**

$$U_N [\text{VDC}] = 0.45 \cdot U_V [\text{VAC}]$$


## 11.4 Pole changing motors

**Dahlander circuit for motors with two speeds and constant torque (number of poles: 4/2, 8/4).**

Low speed

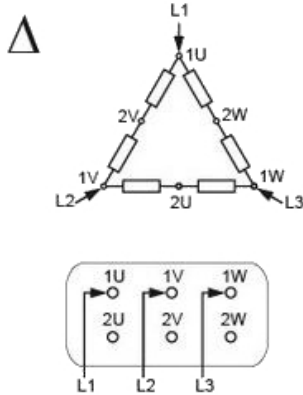


High speed

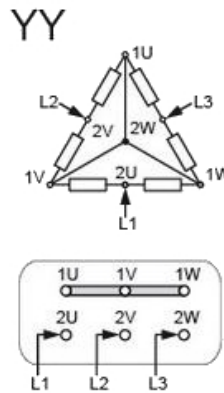


**Dahlander circuit for motors with two speeds and quadrature torque (number of poles: 4/2, 8/4).**

Low speed

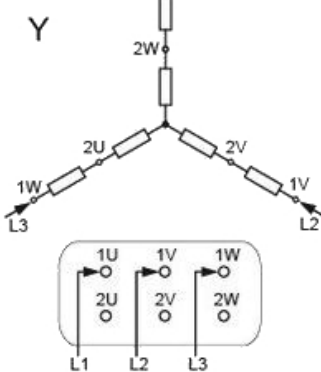


High speed

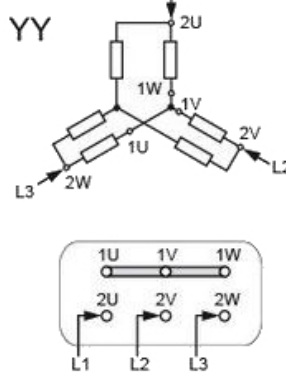


**Circuit for motors with two speeds and two separate windings (number of poles: 6/4, 8/2, 6/2).**

Low speed

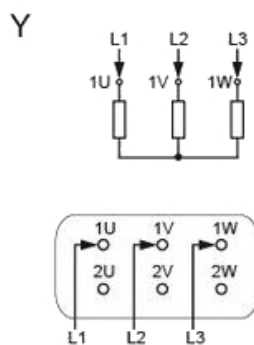


High speed

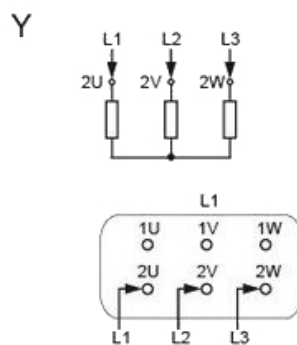

## 12. Motor Behaviour in Frequency Converter Operation

- Load capacity curve of electric motors in frequency converter operation without forced cooling fan.

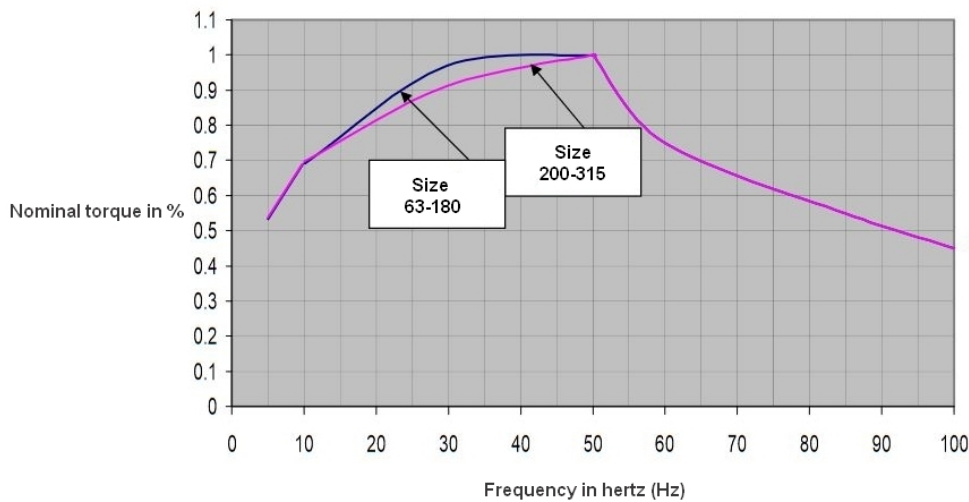

- The minimum frequency is approximately 5 Hz, the recommended maximum frequency is approximately 100 Hz.
- A forced cooling fan must be used for the electric motor for continuous operation at less than 30 Hz.


### 12.1 Explanation of the 87 Hz Characteristic Curve

Electric motors can also be controlled by an 87 Hz characteristic curve when constant torque at high speed is required.

Example:

An electric motor with 1.5kW, 230/400V D/Y, 50 Hz, 1430 rpm, 3.21 A in star connection is reconnected to delta connection. The coil voltage is then 3 x 230V but is designed for 3 x 400V. The three-phase frequency converter reaches this at 87 Hz.

The motor data described above is thus multiplied by a factor of  $\sqrt{3}$  (1.73). They increase to 2.6kW, 400V, 2474 rpm and 5.55 A at a constant torque of 87 Hz. This means that the frequency converter must be adapted to the higher amperage. For this application, at least a 1- or even 2-series larger frequency inverter will have to be used.

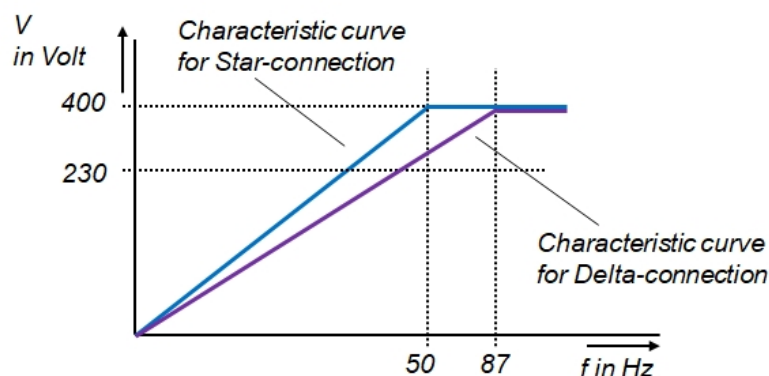

Important Notice:

Usage at above 50 Hz should be for short time periods only. Due to increased mechanical losses and the resulting higher thermal load, the use of a next greater three-phase motor is recommended.

# EU Declaration of Conformity



Manufacturer: SEVA-tec GmbH  
Lether Gewerbestrasse 10  
Address: 26197 Ahlhorn

Product name: **Low voltage asynchronous motors,  
single phase motors, gear motors**

Motors that comply with Guideline 2009/125/EC and Regulation (EU) No. 4/2014 are given the identifier IEx-, before the series designation where x = 1,2,3,4 (according to EN 60034-30-1:2014).

The subject matter of the declaration described above complies with the relevant EU harmonisation legislation:

## **2014/35/EU**

**Directive of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits  
Official Journal of the European Union L96, 29.03.2014, S. 357-374**

## **2014/30/EU**

**Directive of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility  
Official Journal of the European Union L96, 29.03.2014, S. 79-106**

## **2009/125/EC**

**Directive of the European Parliament and of the Council of 21 October 2009 establishing a framework for the setting of ecodesign requirements for energy-related products  
Official Journal of the European Union L285, 31.10.2009, S. 10-35**

**The sole responsibility for issuing this Declaration of Conformity lies with the manufacturers.**

Compliance with the provisions of these Directives is demonstrated by compliance with the following standards:

Reference number and issue date

**EN 61000-6-2:2005+Cor.:2005, EN 61000-6-4:2007+A1:2011**

**EN 60038:2011, EN 60204-1:2018**

**EN 60034-1 :2010+Cor.:2010 and all other relevant parts and additions EN 60034- ...**

The specified product is intended for incorporation into another machine. Commissioning is prohibited until the conformity of the final product with Directive 2006/42/EC has been established. The safety instructions in the supplied product documentation must be observed.

Joachim Schulz  
Managing Director

This certificate attests the conformity with the named directives; however, it is not a promise of properties in the meaning of product liability. In case of electronic communication, the signature does not appear.